

Yard Cleanup and Battery Care Guide

A companion guide for the EGO Power+ 615 CFM cordless leaf blower (LB6151)

1. The 20-minute yard routine

Start on low speed and work from the house outward, so you never blow leaves over ground you already cleared. Push leaves into windrows first, then gather them into one pile. Save turbo mode for wet, stuck leaves only, because turbo drains the 2.5Ah battery in about 16 minutes in lab tests.

2. Battery care that pays off

Charge the battery at room temperature and avoid leaving it flat for weeks. Use the standard charger patiently: a full charge takes roughly 45 to 50 minutes. Store the battery indoors, away from heat and frost, and top it up every few months in the off-season.

3. Safety basics

Wear eye protection and ear protection, even though this blower is quieter than gas models. Keep children and pets clear of the airflow, and never point the nozzle at people, cars, or loose gravel. Check for hidden stones before you start.

4. End-of-season checklist

Blow dust off the intake, wipe the housing clean, and store the blower and battery dry. Note the warranty: 5 years on the tool and 3 years on the battery. Keep your receipt with this guide.

This is an original guide by ZoxDeal. It is not affiliated with or endorsed by EGO Power+.